Z34

34K350Z

OPERATORS MANUAL

SERIOUS RED MOWING MACHINES

Table of Contents

General Information..... A Section

Z34 Kawasaki Quick Reference Sheet A-2

Warranty Information..... A-3

Safety Precautions ..... B Section

Z34 Operation..... C Section

Maintenance Information..... D Section

Service Locator Chart D-1

Electrical ..... E Section

34K350Z, 34K15Z Wire Harness Schematic E-1

Notes ..... F Section

⚠ WARNING:

THE ENGINE EXHAUST FROM THIS PRODUCT CONTAINS CHEMICALS KNOWN IN THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARMS.

IMPORTANT:

A separate Engine Owner's Manual is included with your owner's packet which contains additional engine information that will not be repeated in this manual. You are highly urged to read it before attempting any operation or repair of the engine. Engine Owner's Manual covers the engine manufactures warranty.

General Information

This manual covers the following equipment models:

Z34 – 34K350Z

To the new owner

The purpose of this manual is to assist owners and operators in maintaining and operating the Encore Z34 mower and deck. Please read it carefully; information and instructions furnished can help you achieve years of dependable service. A separate Engine Owner's Manual is included with your owner's packet which contains additional engine information that will not be repeated in this manual. You are highly urged to read it before attempting any operation or repair of the engine. Engine Owner's Manual covers the engine manufactures warranty.

It is the owner's responsibility to make certain that the operator reads and understands this manual and all decals before operating this machine. It is also the owner's responsibility to make certain that the operator is a qualified and physically able individual, properly trained in the operation of this equipment. Local regulations may restrict the age of the operator.

Using this manual

General operation, adjustment and maintenance guidance is outlined for both the experienced and novice Encore user. Operating conditions vary considerably and cannot all be addressed individually. Through experience, however, operators should find no difficulty in developing good operating skills suitable to most conditions. Directions used in this manual, for example RIGHT or LEFT, refer to directions when seated on the mower facing forward unless otherwise stated.

Photographs and illustrations used were current at the time of printing, but subsequent production changes may cause your machine to vary slightly in detail. ENCORE MFG. CO., INC. reserves the right to redesign and change the machine as deemed necessary, without notification.

Warranty registration

The Delivery and Warranty Registration form must be completed and signed to validate your warranty protection. As the new equipment owner, you are expected to see that the form is completed and forwarded to ENCORE MFG. CO., INC. at time of delivery.

IMPORTANT: Any unauthorized modification, alteration, or use of non-approved attachments voids the warranty and releases ENCORE MFG. CO., INC. for any liability arising form subsequent use of this equipment.

Model and serial number

Mower model and serial number are found on the serial tag, located on the seat frame directly under seat plate.

These numbers are required on the Warranty Registration form. They will also assure you of the correct service parts when replacement becomes necessary.

Parts and Service

Use original Encore replacement parts only. These parts are available through your local Encore dealer. To obtain prompt, efficient service, always provide the following information when ordering parts:

1. Correct part description
2. Correct model number
3. Correct serial number

All warranty repair and service must be handled through an authorized Encore dealer. Arrangements should be made through your local service center.

For location of nearest dealer look up our dealer search on our website: www.seriousred.com

Z34 Kawasaki Quick Reference Sheet

Engine

15hp Kawasaki FH430V-AS23

Blades

423029	14.25" blade	14 1/8"
423014	low lift blade	14 1/4"
423173	mulch blade	13 7/8"
423210	super hi-lift blade	14 1/16"
603035	20" blade	20 3/16"
603041	low lift blade	20 3/16"
603055	mulch blade	20"
603056	super hi-lift blade	20 3/16"

Belts

343018	blade drive belt
363210	deck drive belt
583385	pump belt

Tires

343111	wheel/tire assy
343112	drive tire (18x7.5x8)
343113	rim w/ valvestem
363311	front caster complete
363260	front tire & tube (4.10/3.50-4)
* * * *	front rim not serviced

Spindles

583106	spindle assy comp.
583111	housing
363350	bearing
583112	shaft
583113	brg. Spacer tube

Transmission

343120	RH IZT transaxle (Hydro-Gear 328-2400R) Seal Kit # 343152
343121	LH IZT transaxle (Hydro-Gear 328-2400L) Seal Kit # 343152

*** lifetime lubricated transaxles

Throttle 363352
Choke N/A
Muffler 343019
Gasket 423324
Wire Harness 343077
Safety Module N/A

Electrical Components

423027	Ignition Switch
423017	Starter Relay
583423	Time Delay Module
583351	Relay
523034	Park Brake Switch
823193	Neutral Switch
523031	PTO Switch
523030	Seat Switch
523283	Hour Meter

Clutch 343084

Torque Specs

65 ft-lbs	blade bolt
90 ft-lbs	nut on top of spindle
50 ft-lbs	clutch bolt

Front Caster Bearings

423200	bearing
423201	bearing retainer

Seat

423246	seat complete w/o tracks
583089	seat cushion
583090	back cushion
593097	molded arm rest

ENCORE WARRANTY

WHAT IS COVERED BY THIS WARRANTY

This warranty extends to the original retail purchaser only and commences on the date of original retail purchase:

1. Residential use: The warranty will be **Two years from the date of purchase** against defects in workmanship and materials for any Encore rider that is used for consumer purpose. Normal residential use means use of product on owners' property only.
2. Commercial use: The warranty will be **Two year from the date of purchase and 90 days for rental use** against defects in workmanship and materials for any Encore rider that is used for commercial purpose.
3. If the Purchaser discovers within this warranty period a defect in materials or workmanship:
   - Purchaser must promptly notify an Authorized Encore Dealer and return the mower, including any defective parts, to an Authorized Encore Service Dealer.
   - Encore Mfg. Co., Inc. will determine if material or workmanship is defective and then either repair or replace such parts.
   - Service calls and/or transportation expense of the product to and from the authorized dealer, for warranty work, will be paid by the owner of the product.
4. Encore Mfg. Co., Inc. provides a limited warranty for **90 days from the date of purchase** against defects in workmanship and materials for all parts, excluding normal wear items such as batteries, tires, and belts.
5. The Deck Shell warranty is **Ten years from the date of purchase** against defects in workmanship and materials for any Encore rider that is used for consumer and commercial use only.
6. ***NOTICE:*** Cutter housings, electrical components, hydraulic components and electric-clutch must be returned before warranty will be paid.
7. **The engine warranty is covered by its respective manufacturer.** Please refer to the manufacture's warranty statement in the manufacture's engine manual that is included in the literature packet. ***Engine warranties should be referred to the nearest authorized service outlet of the engine manufacturer.***

Encore Mfg. Co., Inc. reserves the right to change or improve the design of any mower without assuming any obligation to modify any mower previously manufactured.

WHO MUST PERFORM THE WARRANTY SERVICE

All warranty service will be performed by dealers authorized by Encore Mfg. Co., Inc. Service calls and/or transportation expense of the product to and from the authorized dealer, for warranty work, will be paid by the owner of the product. For warranty service you can contact an authorized dealer or contact:

Encore Mfg. Co., Inc.
PO Box 888
Beatrice, Nebraska 68310
1-800-267-4255
www.encoreequipment.com
www.seriousred.com

WHAT IS NOT COVERED BY THIS WARRANTY

Encore Mfg. Co., Inc. does not warranty:

- Repairs made by unauthorized persons.
- Damage caused by use of the Encore equipment for purposes other than those for which it was designed
- Damages caused by disasters such as fire, flood, wind, and lightening.
- Damages caused by neglect, abuse, abnormal use, improper or unreasonable use, accident, negligence or misuse.
- Repairs or replacement resulting from the use of unauthorized parts, accessories or attachments.
- Repairs or replacement as the result of any alterations or modifications, in the determination of Encore, which adversely affects the operation, performance or durability of the equipment.
- Encore unit which has the serial number removed or made illegible.
- Depreciation or damage caused by normal wear, lack of reasonable and proper maintenance or failure to follow the product's owner's manual provided by Encore Mfg. Co., Inc.
- Normal maintenance parts and service including, but not limited to: filters, fuel, lubricants, tune-up parts, belts, blades, blade sharpening, brake or steering adjustments.
- Repairs necessary due to improper fuel, contaminates in the fuel system, or failure to properly prepare the fuel system prior to any period of non-use over three months.

LIMITATION OF REMEDIES

In no case shall Encore Mfg. Co., Inc. be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability in tort, or any other legal theory.
Such damages include, but are not limited to

- Loss of profits
- Loss of savings or revenue
- Loss of use of Encore mower or any associated equipment
- Cost of capital
- Cost of any substitute equipment, facilities, services, or downtime
- The claims of third parties including customers, and injury to property
- Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

OWNER'S RESPONSIBILITY

You must maintain your Encore Product following the maintenance procedures described in your owner's manual. Such routine maintenance, whether performed by a dealer or by you, is at your expense.

This machine, like any other powered equipment, is potentially dangerous unless properly operated. Any operator must be cautious and keep safety in mind at all times.
Any operator, prior to using the Encore equipment, should thoroughly familiarize himself with the owner's manual regarding operation and safety of the machine, as well as all safety warnings on the machine itself.

ENCORE MFG. CO., INC. CANNOT BE RESPONSIBLE FOR THE WAY YOU OPERATE, OR THE CONDITIONS IN WHICH YOU OPERATE THE MOWER. USE COMMON SENSE AT ALL TIMES.

WARRANTY REGISTRATION

1. The Warranty registration form MUST be completed and forwarded to Encore Mfg. Co., Inc. within fifteen days following date of purchase.
2. The date of purchase constitutes delivery.

Encore Mfg. Co., Inc. does not assume or authorize anyone to assume for them any other obligation.

Your mower is only as safe as the operator! Operator carelessness or error may result in serious bodily injury. Improper maintenance of the machine may also result in injury. Please read and follow these instructions on Safe Operation and be certain that anyone using this mower fully understands and follows these instructions. Instructions are from ANSI Standard B17.4-2004.

1. Familiarize yourself with the controls and know how to stop the rider and mower deck quickly.

⚠ WARNING:

DO NOT allow children to operate the machine. **DO NOT** allow any adult to operate the machine without proper instruction.

2. Inspect your work area carefully. Remove debris from the area to be cut. Keep all bystanders away from the mowing area.

3. **Avoid contact with moving parts. Keep hands and feet clear of the mower deck.**

4. Never direct the discharge of material toward bystanders or allow anyone near the machine while in operation.

5. The machine is not intended for highway or street use. Never carry passengers!

6. Never tamper with safety devices or guards. If a guard or safety device is damaged or removed, replace it before operating the rider.

⚠ CAUTION:

Never add fuel to the tank while the engine is running or hot. ALWAYS WAIT at least five minutes before refueling and REFUEL WITH THE ENGINE OFF. KEEP FUEL AWAY FROM SPARKS OR FLAMES. WIPE AWAY any fuel spillage BEFORE starting unit. Never fill the fuel tank indoors. Wipe up any spilled gasoline. **Gasoline is highly flammable - NO SMOKING.**

7. Handle gasoline carefully. Use an approved gasoline container. Fill the fuel tank, to within 1” from the neck, with good quality unleaded gasoline.

8. Seat must be occupied and drive levers must be in the Neutral position and the Blade Clutch must be disengaged before starting engine.

9. Operator must wear proper shoes and clothing, which may include safety glasses and ear protection.

10. Mow only during daylight hours or under very good artificial light.

11. The safety shield over the Grass Discharge area must always be bolted in place and in the DOWN position unless the Grass Catcher is being used.

12. If a solid object has been hit by the blades stop the machine and check for damage. Repair or replace any damaged / broken part prior to restarting the engine.

13. To avoid burns, **DO NOT TOUCH** the engine or muffler immediately after operation or during.

14. Disengage blades when transporting and when crossing walks and gravel roads.

15. **DO NOT** mow close to drop-offs, deep ditches or other hazards. **DO NOT** attempt to mow slopes grater than 15°, Always mow across the face of a slope **NOT** up and down.

16. Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing direction on slopes.

17. The Encore Rider is **NOT** designed for towing.

18. **Only factory approved Grass Collection Systems are permitted**.

19. Shut off fuel while storing or transporting. Do Not store fuel near flames ot drain indoors.

Before Operating - Reminders

Fill engine crankcase as per engine manufacturer's manual. **ENGINE DOES NOT HAVE OIL IN CRANKCASE FROM THE FACTORY.** Add proper fuel to fuel tank, open shut-off valve.
The battery is now a gel-cell and w ill not require acid.
Before hooking up the ground wires make sure that the engine has been filled to the proper level with oil.
If battery will not turn the engine over after hooking the wires up it may require a charge for 15 to 20 minutes.

ASSEMBLY INSTRUCTIONS

Remove unit from crate, taking care to remove inner boxes and the small parts box.

1. Remove deflector chute, bolt bag and operator's manual from main assembly.
2. Open bolt bag and lay out the following bolts:
   (8) 5/16" -18 x 3/4" HHCS
   (4) 5/16" lock washers
   (4) 5/16" nyloc nuts
   (4) 5/16" -18 whizlock nuts
3. Taking four of the 5/16" -18 x 3/4" bolts and four of the 5/16" lock washers, attach the seat to the seat plate.
4. Using the remaining bolts and whizlock nuts, bolt the control levers onto the **outsides** of the mount angles, adjusting them according to operator comfort.
5. With the operator's seat in the raised position locate the two lead seat switch wire located in the seat frame. Attach the two leads to the seat switch located on the under-side of the seat.
6. Fill engine crank case as per engine manufacturer's manual. The engine **DOES NOT** have oil in the crankcase from the factory.
7. Raise the unit slightly and place a board under each rear wheel. With the deck in the raised position start the unit and drive it off the pallet.

Once you are familiar with the contents of this manual, you are ready to mow with the finest mower built!

STARTING ENGINE

Throttle control, ignition switch and choke control are located between motion control levers on the front panel under the front of the seat.
Because of a built-in safety interlock system, your machine will not start unless the seat is occupied.

TO START ENGINE: occupy seat, set park brake, leave the motion control levers swung out, move throttle control lever all way to choke position. Turn ignition key to start position to engage starter, release the key when engine starts. Ignition switch is spring loaded and will return to run position automatically.
Slowly return choke to run position once the engine has started.

STOPPING ENGINE

TO STOP ENGINE: move throttle lever to idle position and turn ignition key to "OFF" position. If engine has been working hard or is hot, allow engine to idle for a short period of time before turning off key. This practice will help cool engine before stopping.

IN CASE OF EMERGENCY engine may be stopped by turning ignition key to "OFF" position.

⚠ CAUTION:
Always remove the key and set the parking brake when leaving the machine unattended, even for just a few minutes.
PREVENT ACCIDENTS: Do not give children or unauthorized persons an opportunity to operate this machine.

⚠ WARNING:
THE ENGINE EXHAUST FROM THIS PRODUCT CONTAINS CHEMICALS KNOWN IN THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARMS.

⚠ WARNING:
DO NOT allow children to operate the machine. **DO NOT** allow any adult to operate the machine without proper instruction.

SAFETY INTERLOCK SYSTEM

Your Encore Rider is equipped with a Safety Interlock System that is designed to help prevent possible serious injuries. Understanding and maintaining this system is vital, for maximum safe operation.

TO START ENGINE:

1. Blades (PTO) must be “OFF”.
2. Control levers in neutral (swung out).
3. Park Brake “ON”.
4. Operator in seat.

THE ENGINE WILL KILL IF:

1. The operator leaves the seat with:
   a. The control levers out of neutral (swung in).
   b. The blades on (PTO).
   c. The park brake is “OFF”.
   d. All the above.
2. The park brake is set before the control levers are in neutral (swung out)

CORRECT TRANSMISSION OPERATION TO GO FORWARD OR REVERSE

The Encore Rider is equipped with a pump/wheel motor unit for each wheel and are controlled with “Motion Control Levers” , one for each wheel.

See Figure 1

MOWING SPEED

The Encore Rider is designed to operate most efficiently at maximum blade speeds.

The running speed of the machine should allow the mower blades to maintain this maximum speed while mowing across turf. Use a slower ground speed for cutting tall grass, grass which is heavy with moisture, or when mowing uphill. If ground speed is too fast, or blade speed is too slow, mowing will be uneven because mower blades will not be able to lift grass into cutting position as the mower passes.

Throttle control regulates speed of engine as measured in RPM. This control SHOULD NOT be used to control ground speed.

AS SETTING IN THE DRIVER’S SEAT

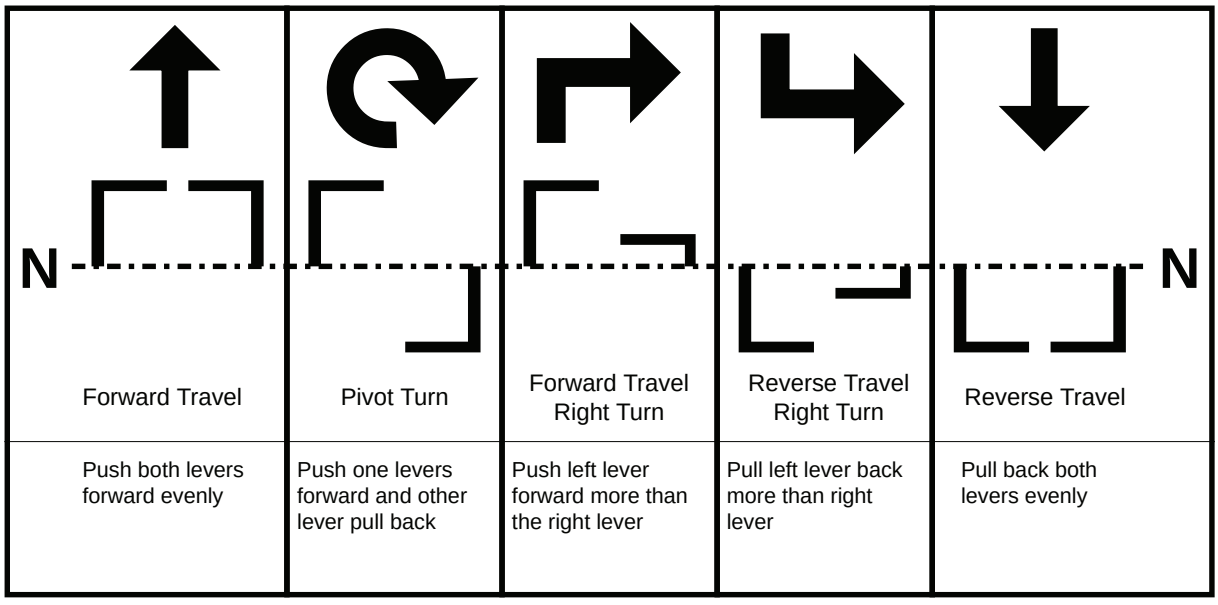

Forward Travel	Pivot Turn	Forward Travel Right Turn	Reverse Travel Right Turn	Reverse Travel
Push both levers forward evenly	Push one levers forward and other lever pull back	Push left lever forward more than the right lever	Pull left lever back more than right lever	Pull back both levers evenly

N = Neutral or Stopped Travel [Return both levers evenly to the neutral position.]

Direction of arrows indicate direction of machine travel.

The further the levers are moved away from the neutral position, the faster the machine will travel.

To turn the mower LEFT or RIGHT, slow the speed of the wheel in the direction you want to turn.

To CHANGE DIRECTION, slowly move levers to neutral and move the lever forward in the direction of travel you want to go.

Figure 1

SERVICE LOCATOR CHART

1. Front Caster Wheel Bearings (2)
2. Front Caster Pivot Bearing Zerks (2)
3. Engine Oil Fill & Dipstick
4. Engine Oil Filter
5. Engine Air Filter
6. Battery
7. Fuel Tank
8. Engine Fuel Filter
9. Fuel Shut-off Valve
10. Fender w/ Cup Holder
11. Steering Block Zerks (2)
12. Engine Vent Screen
13. Drive Tires
14. Pump Belt (583385)
15. Blade Drive Belt (343018)
16. Deck Drive Belt (363210)
17. Tiltable Foot Plate
18. Front Casters Wheels
19. Starter Relay
20. 20” Blade
21. 14.25” Blade
22. Located inside the seat frame under operators seat:
    1. Time delay module
    2. Relays
    3. Fuse Block

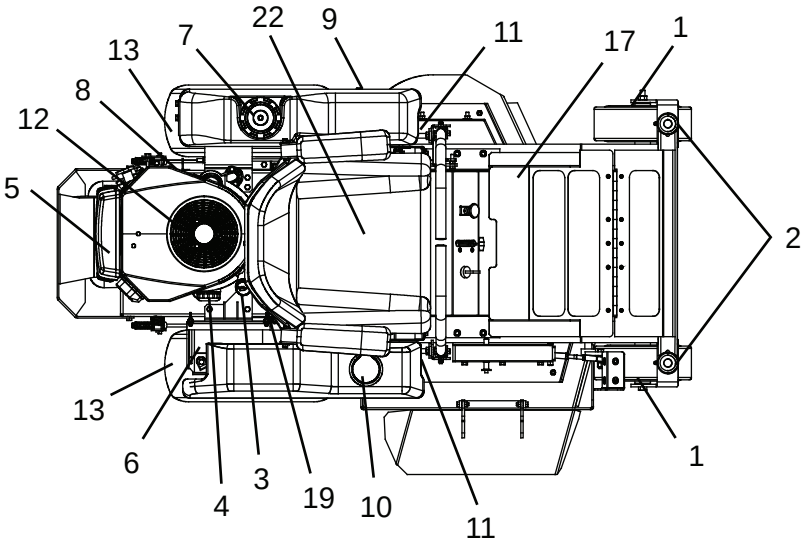

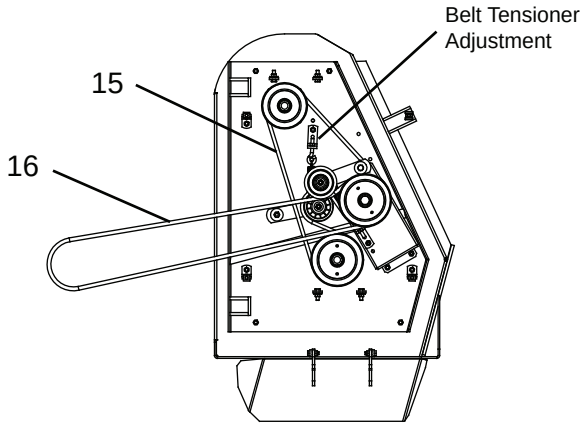

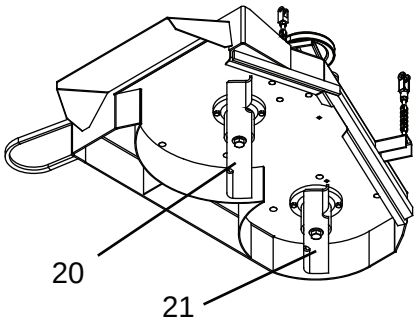

VIEWED FROM UNDER OF DECK

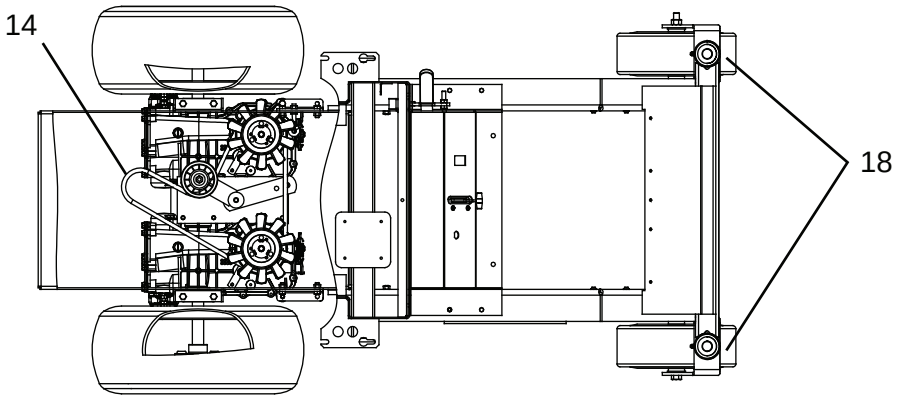

VIEWED FROM TOP OF UNIT

Figure 2

MAINTENANCE INFO

1. Do not adjust mower or change attachments unless the engine has been stopped and the key has been removed.
2. Good maintenance, wiping up gasoline and oil spills, will reduce potential fire hazards.
3. To insure that the mower will remain in safe operating condition, check and tighten all bolts, nuts and screws. Especially make certain the blade bolt/nuts are always tightened properly.
4. Never adjust governor on engine to a faster speed. The engine manufacturer adjusts the engine RPM to the proper setting.
5. Allow time for the engine to cool down prior to storing mower. Do not store mower or gasoline near any open flame or where gasoline fumes may be ignited.
6. Always replace worn or broken parts with genuine Encore repair parts purchased from an authorized Encore dealer. Using anything other than Encore repair parts may void all Encore factory warranties.

OIL AND FILTER

Since the hydraulic drives on the Z34 Rider are lifetime lubricated there are no required filter and or oil changes required. Please refer to the engine manual for engine lubrication recommendations.

⚠ CAUTION:

DO NOT SPILL OIL OR GREASE ON BELTS.

TIRE PRESSURE

This vehicle has been designed to achieve maximum operator comfort and ride. This cannot be achieved without proper tire pressure. A low pressure gauge is required to check the front tires.

Front Tires - 14 PSI
Rear Tires - 20 PSI

NOTES:

The Encore Rider is driven and steered by the rear wheels.

REAR TIRE CIRCUMFERENCE DIRECTLY EFFECTS THE TRACKING OF THE MACHINE.

If the machine will not drive in a straight line, check air pressure and adjust accordingly.

Lubrication

The following recommendations on lubrication chart below should be adhered to. Environmental conditions may be cause to vary frequency. Grease points are pointed out in Figure 2.

Description of Maintenance Task	Service Intervals
Blades - sharpen & securely fastened to 65 ft-lbs	Daily
Check fuel level	Daily
Discharge chute - securely in place & in lowest position	Daily
Verify safety start interlock system	Daily
Visually inspect tires	Daily
Visually inspect unit for loose hardware and/or damaged parts	Daily
Check battery connections	Every 50 hours
Check tire pressure with a guage	Every 50 hours
Check pump drive belt tension & condition	Every 100 hours
Check blade drive belt tension & condition	Every 100 hours
Check deck drive belt tension & condition	Every 100 hours
Tighten lug nuts on wheels	Every 100 hours
Check oil level in engine	See Note A
Change engine oil & filter	See Note A
Change fuel filter	See Note A
Clean air intake screen	See Note A
Clean cylinder / head fins	See Note A
Clean foam element	See Note A
Clean paper element	See Note A
Replace air cleaner paper element	See Note A
Clean and regap or replace spark plugs	See Note A

Note:
A. Refer to Supplied Engine Manufactures Owner's Manual for all maintance and engine manufactures warranty policy information

BATTERY

The battery is located under the right hand fender to the rear of the machine. The gel-cell battery is maintenance free.

⚠ CAUTION:

When servicing the battery or any other part of the electrical system, or if the battery must be removed for any reason, always, disconnect negative (ground) cable FIRST and reconnect it LAST to avoid possibility of electrical shorts.

At temperatures below 32° F (0° C), full charge state must be maintained to prevent cell electrolyte from freezing and causing permanent battery damage.

For longest service life, battery should be kept clean by wiping it off with a paper towel. Any corrosion around battery should be removed by applying a solution of one part baking soda to four parts water. A light coating of grease or petroleum jelly may be applied to all exposed terminal surfaces to prevent corrosion.

Belt Adjustment

Remove key from the ignition switch. The blade drive belt and the deck drive belt may be accessed by raising the foot plate. Each of these belts have an eyebolt for adjusting spring tension.

See Figure 4.

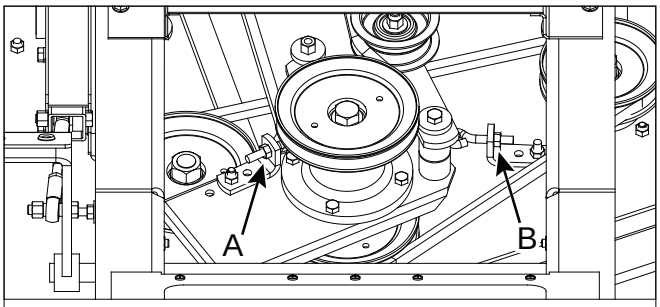

A: Deck Drive Belt Tensioner eyebolt
B: Blade Drive Belt Tensioner eyebolt

Figure 4

Spring tension should be maintained by having approximately 1/8” stretch between coils. By turning the nut on the eyebolt clockwise you increase the tension, counter clockwise will decrease tension.

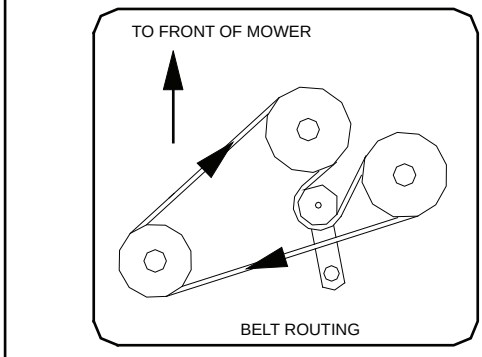

Simplied View

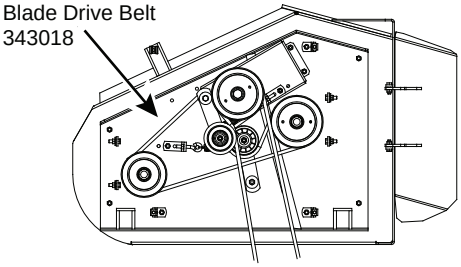

Top View of the Deck

Figure 5

When installing a belt please refer to the following figure 5 for routing the belt.

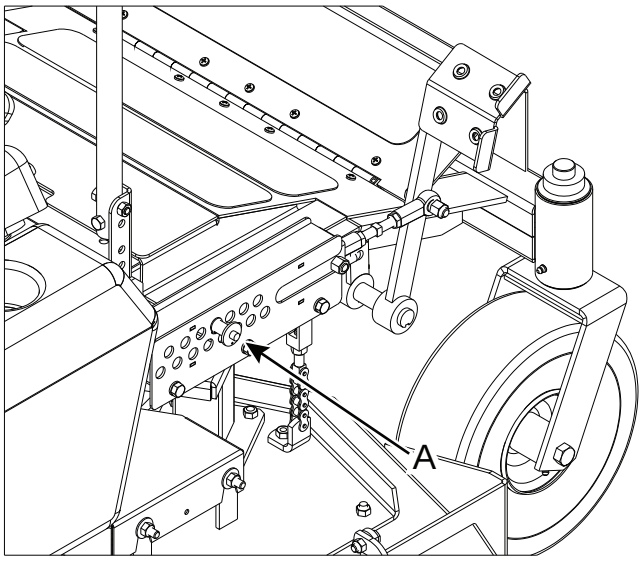

Figure 6

Deck Height Adjustment

Deck height adjustment can be attained by pressing down on the foot pedal and pulling the cut pin (A) out and repositioning it with the corresponding hole to the depth gauge label (See Fig. 6). Adjustments can be made in 1/4" increments from 1" to 4 1/2".

Leveling Deck

The deck comes from the manufacturer pre-leveled. If the deck does not appear to be cutting level use the following procedure. When leveling the deck, you will notice there are four chains (B) that support the deck (See fig. 8) these are the points you adjust when you need to level the deck.

1. Set all tire pressures to the correct specification.
2. Place machine on a level concrete surface.
3. Wearing heavy gloves, move blades by hand so they are pointing in the same direction. Measure from the blade tip (beveled edge to the ground. If there is more than 3/16" difference from one side to the other, the deck should be leveled.
4. Adjust deck height by loosening nut on deck lift chain and raising or lowering accordingly. Once you have achieved a difference of 3/16" or less retighten nut.

Tracking Adjustment

The Encore Z34 riding lawnmower comes from the factory with the neutral setting already adjusted; however, the full-speed tracking will require checking.

The full-speed tracking may be checked by operating the machine on a smooth level surface. If the machine tends to travel more to one side rather than in a straight line, the tracking requires adjustment.

The tracking adjustment can be made by altering the position of the stop-plate located beneath the fuel tank/fender on each side of the machine. See Figure 7. The stop-plate limits the amount of stroke allowed on the steering lever. By rotating the stop-plate away from the linkage rod, the steering lever will be allowed to travel further thereby making that side faster.

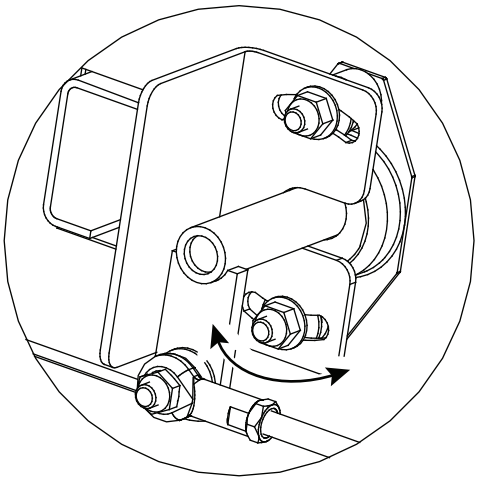

Figure 7

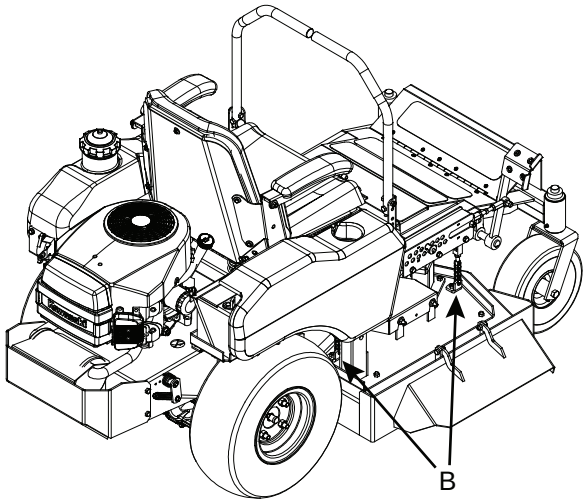

Figure 8

Mower Blades

Check sharpness of mower blades after every 10 hours of operation. To sharpen blades proceed as follows:

⚠ CAUTION:
TURN OFF ENGINE AND REMOVE KEY BEFORE MAKING ANY ADJUSTMENTS.

- Block front end of mower up or run front up on ramps.
- Remove blade by turning bolt counter clockwise.
- Blades should be discarded when worn excessively. See Sketch.

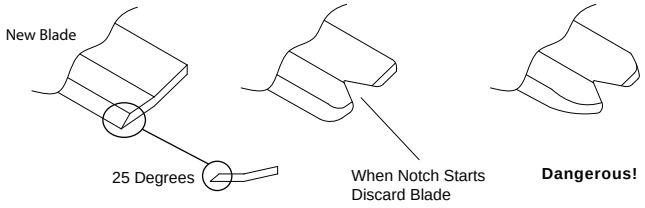

- Sharpen blade with a hand file, electric grinder or blade sharpener. Wear gloves and eye protection when sharpening. Grind blade at original bevel.
- Check balance of blade by positioning the blade on a nail or blade balance pedestal. Grind the blade on the end that is heavier until both sides balance.
- Do not wear loose fitting clothing which could get caught in moving parts. Always be sure to wear adequate protective clothing. Wearing safety glasses and safety shoes is advisable.

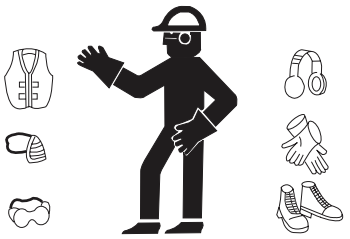

- Reinstall blades. Refer to Figure 9 for further information

Important Note:
Cup side of spring washer goes against blade.

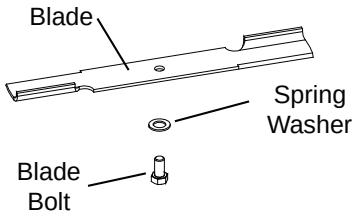

Bypass Valve

In some applications, it is desirable to move the machine for short distances at low speeds without operating the engine. Using (A) push the lever forward and then turn the knob (B) clockwise to lock lever in forward position. You will need to return the lever to its previous position prior to operating again.

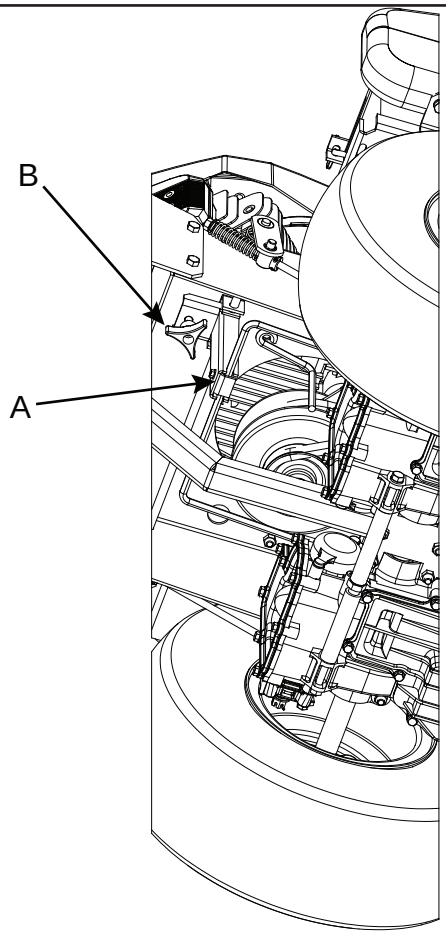

Figure 10

ENCORE PART #: 343077
WIRE HARNESS FOR 34K350Z ; 15 HP KAWASAKI
WIRE HARNESS FOR 34K15Z ; 15 HP KAWASAKI

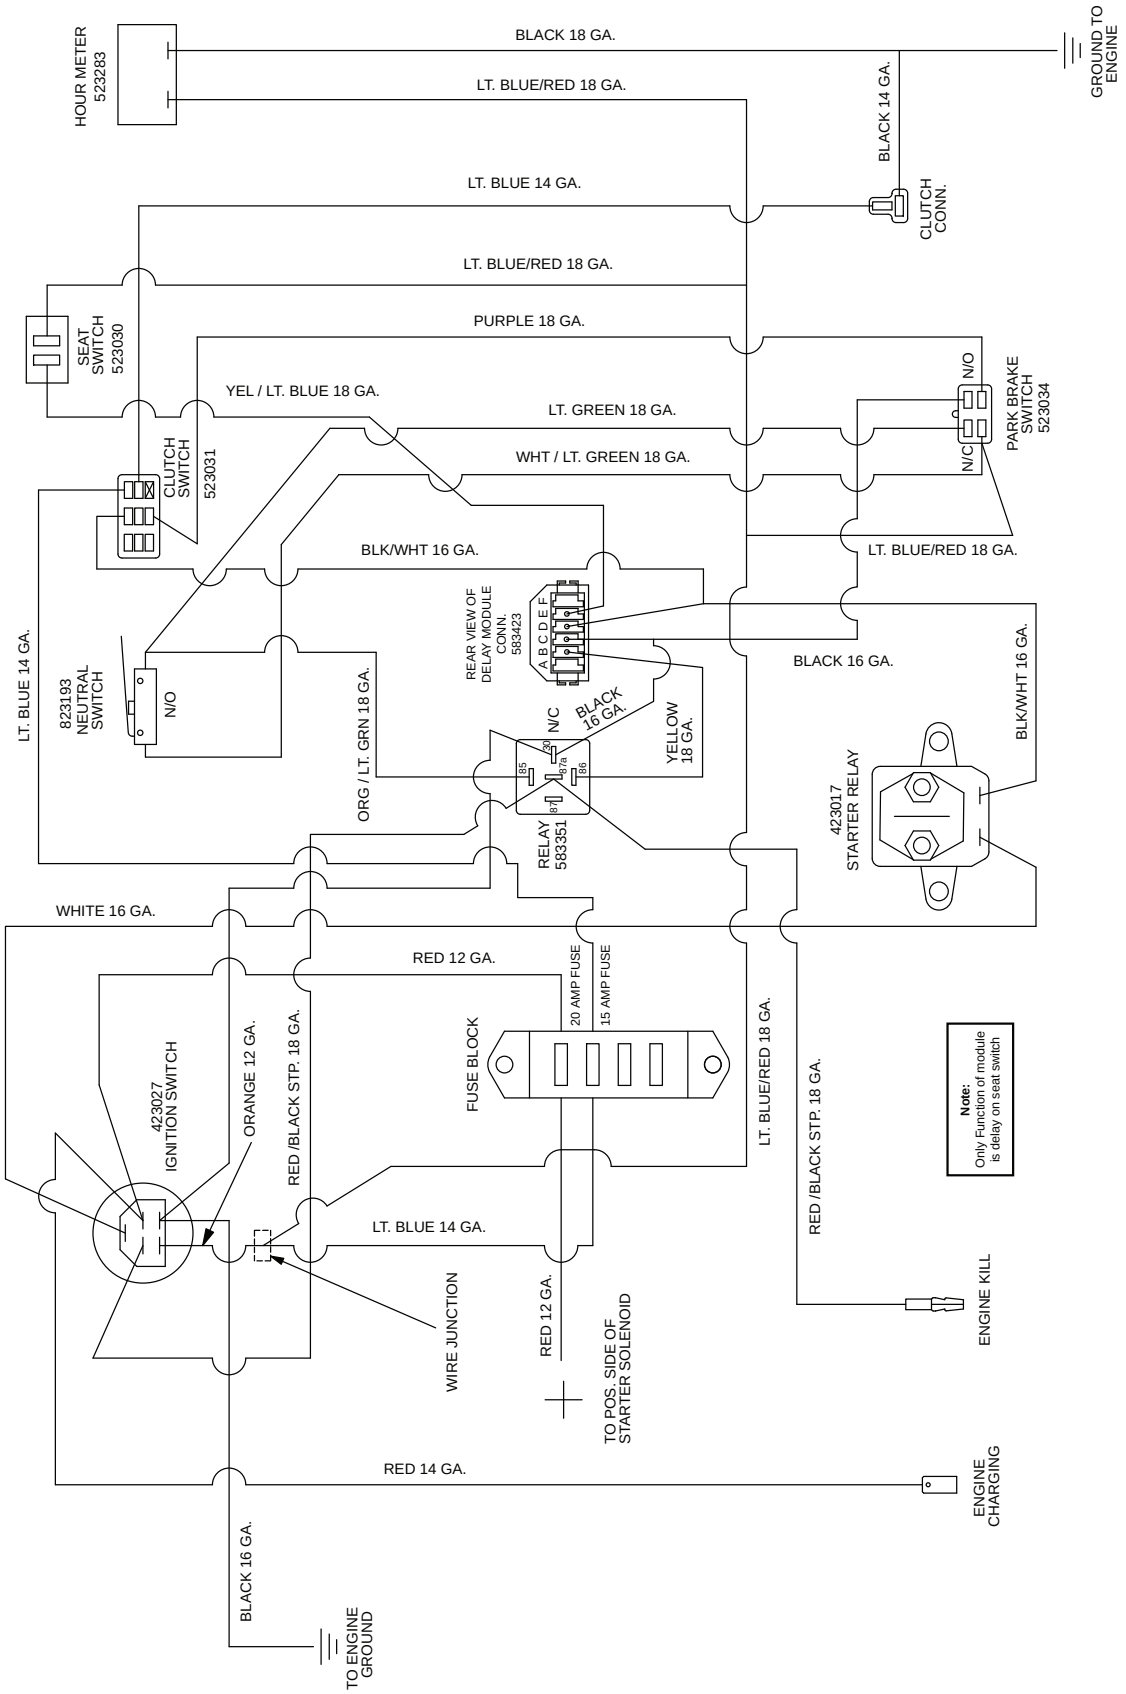

Notes

Notes

Notes

Notes

0811 A ,ENCORE MANUFACTURING CO., INC.
All rights reserved. Contents subject to change.